


DIMMER CONTROL WIRING INSTRUCTIONS

 
 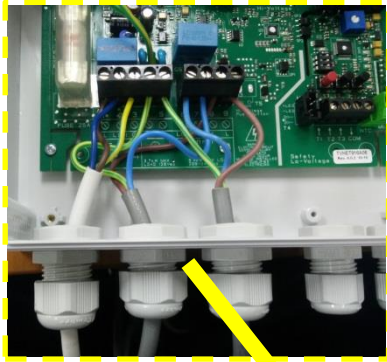


Note: No neutral line needed when running (2) hot legs of 120V. Neutral only needed if breaker provides a solid 220-240V line.

HOT (120V)-----LIVE
HOT (120V)-----NEUTRAL
EARTH

Power Supply
230Vac, 28A

DIMMER TERMINAL BLOCK



E1 E2

HEATER

N2

L2

N1

L1

Junction Box

Heater Element 1
Heater Element 2

MUST BE INSTALLED BY LICENCED ELECTRICIAN

